

**OPTION 456 - RETROFIT PROCEDURE**

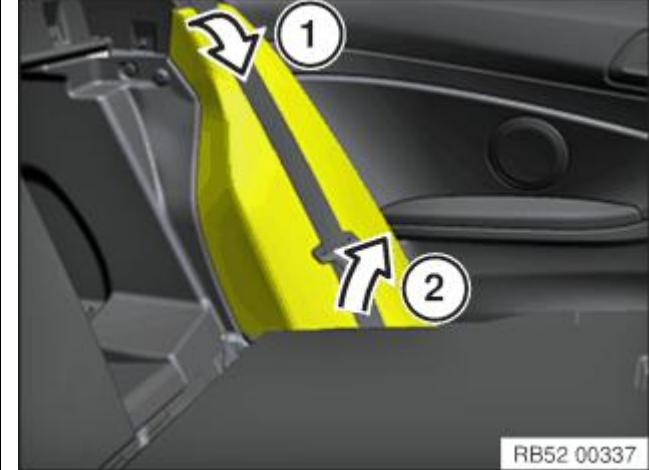
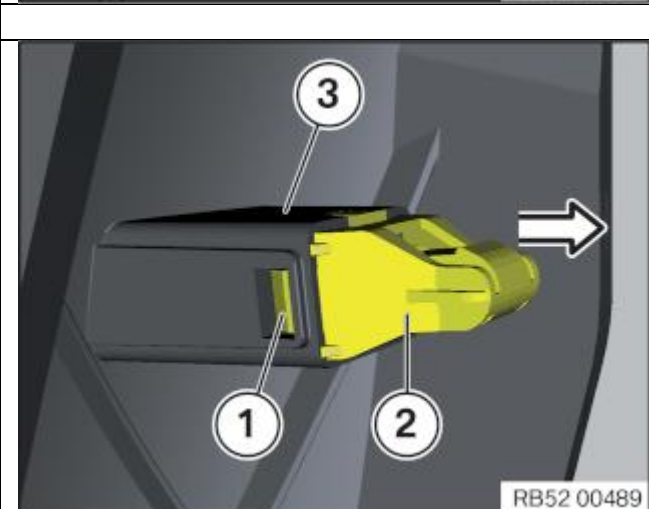
Refer to the following ISTA Repair Instructions:

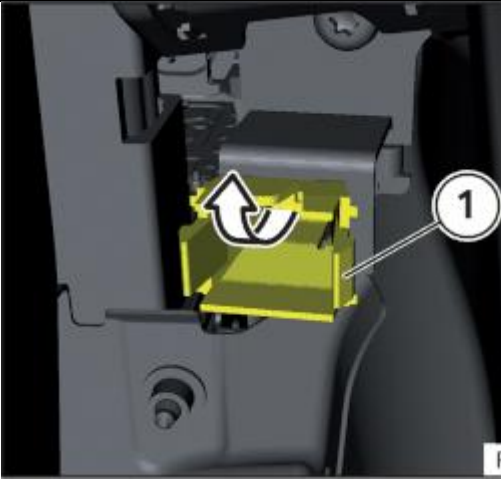
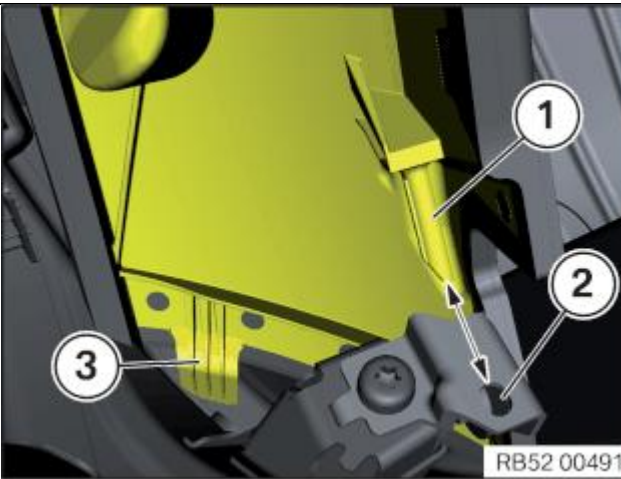

51 47 143 "Removing and installing/replacing passenger compartment partition wall trim panel"

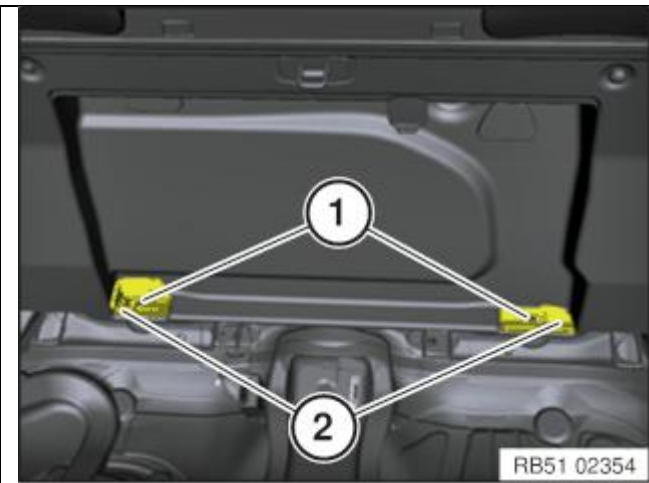
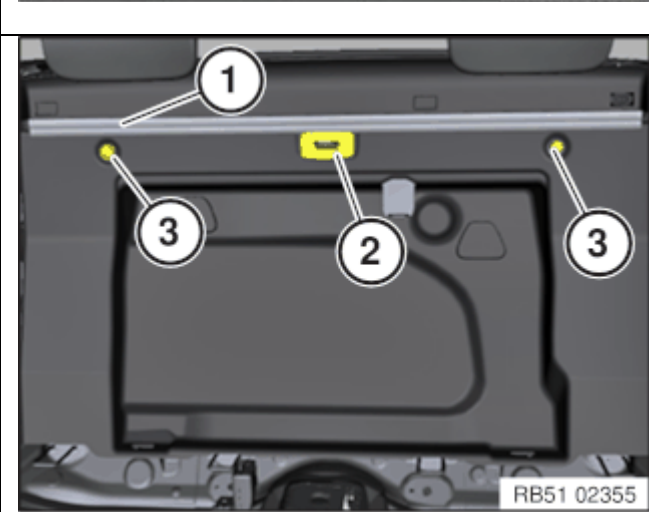
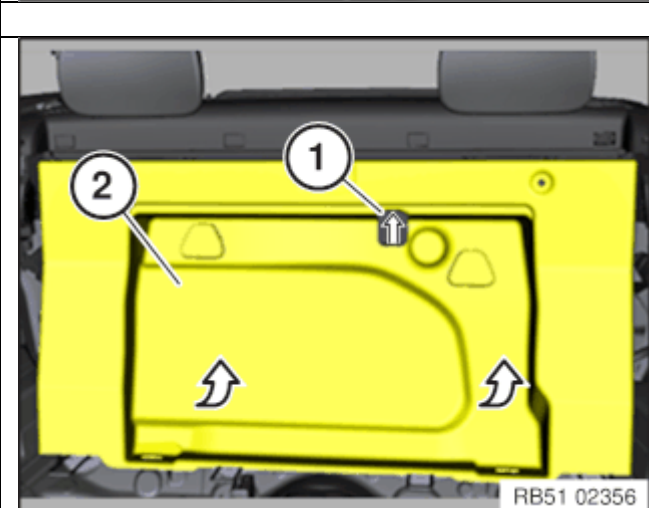
52 24 044 "Removing and installing backrest"

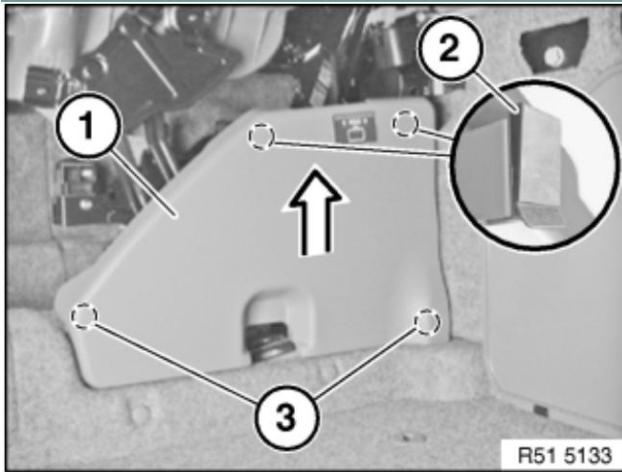
52 26 008 "Removing and installing/replacing backrest side section on left or right rear seat backrest"

To retrofit SA456 to the vehicle:

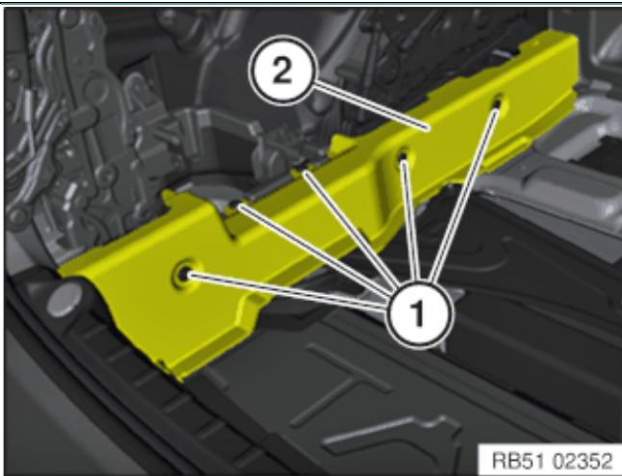
	<p>Unfasten the rear safety backrest and tilt it forwards. Pull the safety belt towards the middle and place it over the head restraint. Pull the top backrest side section (1) forwards and pull it out upwards (2).</p>
	<p>If necessary, replace the defective clip (2) from the backrest side section. Unfasten the left and right catches (1), and pull the clip (3) off the backrest side section (2).</p>

 <p>RB52 00490</p>	<p>If necessary, replace the defective clip (1) from the body. Pull the clip (1) towards the front, out of the body.</p>
 <p>RB52 00491</p>	<p>Installation note: Slide the guide (1) into the fixture (2) and guide (3) behind the rear seat bench.</p>
 <p>RB52 00492</p>	<p>Unlock and tilt the back backrest forward. Remove the screws (1) (the screws must be replaced). Tightening torque = 42 Nm Remove the backrest.</p>

	<p>Remove the screws (1). Remove both left and right wind deflector brackets (2).</p>
	<p>Remove the cover (2). Pull off the buffer (3) and remove the screws that are underneath. Pull off the trim panel (1) towards the bottom.</p>
	<p>Slide the locking slide for the wind deflector (1) upwards. Feed out the trim panel (2) and remove.</p>

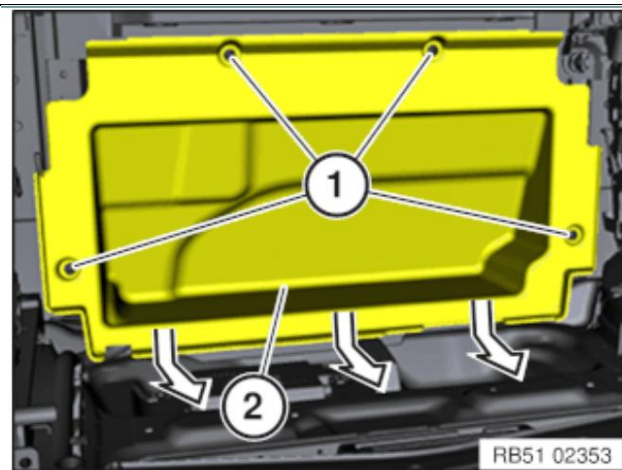


Slide up the trim for the main bearing on both left and right sides of the luggage compartment.



Remove the three plastic rivets (1) that are exposed, facing the center of the luggage compartment.

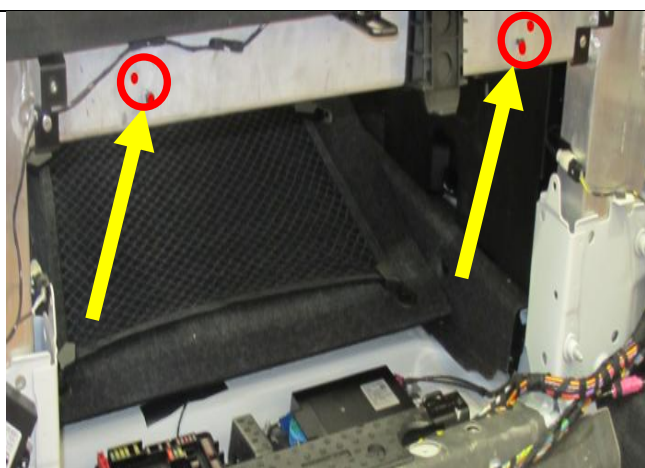
Remove the luggage compartment floor panel.



Remove the four plastic rivets (1) from the luggage compartment partition wall. Remove the partition wall.



Install P/N 51 47 7 363 430 (bracket for the “thief-proofing flap”) using two blind rivets (P/N 07 14 7 265 872).



Install both wind deflector stops in the areas highlighted in red, using one self-tapping screw for each side. **Note: The stops are left- and right-side specific.**



Reinstall the removed parts in the reverse order of their removal.  
Use the parts list below as a guide.

The partition flap is installed last. Push the door down into the metal brackets.